


Digital

Einstellung der Adresse und der Fahreigenschaften
 Setting the address and operating characteristics
 Réglage de l'adresse et des propriétés de trafic
 Instelling van het adres en rij-eigenschappen
 Selección del código y de las prestaciones
 Impostazione dell'indirizzo e delle caratteristiche di marcia
 Inställning av adress och köregenskaper
 Inställning af adressen och köregenskaberne

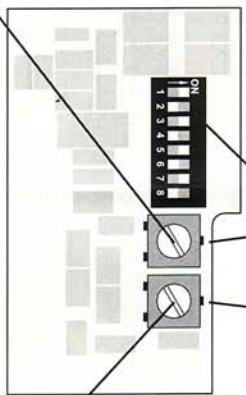

Höchst-Geschwindigkeit
 Maximum speed
 Vitesse maximum
 Macimum snelheid
 Velocidad máxima
 Velocità massima
 Maxfart
 Maksimalhastighed

Adressänderung DELTA / Digital
 Changing addresses for DELTA / Digital
 Choix d'adresses DELTA / Digital
 Adres wijzigen DELTA / digital
 Cambio de dirección DELTA / Digital
 Variazione dell'indirizzo DELTA / Digital
 Adressändring DELTA / Digital
 Adresseändring DELTA / Digital

Antah- und Bremsverzögerung
 Acceleration and braking delay
 Progressivité au démarrage et au freinage
 Optrek- en afremvertraging
 Arrange y frenado progresivo
 Ritardo di avviamento e frenatura
 Accelerations- och bromsdröjning
 Igangsetnings- og bremsforsinkelse


Digital	1 2 3 4 5 6 7 8	01	- 2 3 - 5 - 7 -
		02	- 3 - 5 - 7 -
		03	1 - - 4 5 - 7 -
		04	- 2 - 4 5 - 7 -
		05	- - 4 5 - 7 -
		06	1 - - 5 - 7 -
		07	- 2 - - 5 - 7 -
		08	- - - 5 - 7 -
		09	1 - 3 - - 6 7 -
		10	- 2 3 - - 6 7 -
		11	- - 3 - - 6 7 -
		12	1 - - 4 - 6 7 -
		13	- 2 - 4 - 6 7 -
		14	- - 4 - 6 7 -
		15	1 - - - 6 7 -
		16	- 2 - - - 6 7 -
		17	1 - 3 - - - 6 7 -
		18	- 2 3 - - - 7 -
		19	- - 2 3 - - - 7 -
		20	1 - - 3 - - - 7 -
		21	- 2 - 4 - - - 7 -
		22	- - 4 - - - 7 -
		23	1 - - 4 - - - 7 -
		24	- 2 - - - - 7 -
		25	1 - - - - - 7 -
		26	- 2 - - - - 7 -
		27	1 - 3 - 5 - - 8

Digital	1 2 3 4 5 6 7 8	28	- 2 3 - 5 - - 8
		29	- 3 - 5 - - 8
		30	1 - - 4 5 - - 8
		31	- 2 - 4 5 - - 8
		32	- - 4 5 - - 8
		33	1 - - 5 - - 8
		34	- 2 - - 5 - - 8
		35	- - - 5 - - 8
		36	1 - 3 - - 6 - 8
		37	- 2 3 - - 6 - 8
		38	- - 3 - - 6 - 8
		39	1 - - 4 - 6 - 8
		40	- 2 - 4 - 6 - 8
		41	- - 4 - 6 - 8
		42	1 - - - 6 - 8
		43	- 2 - - - 6 - 8
		44	1 - 3 - - - 6 - 8
		45	- 2 3 - - - 8
		46	- - 2 3 - - - 8
		47	1 - - 3 - - - 8
		48	- 2 - 4 - - - 8
		49	- - 4 - - - 8
		50	1 - - 4 - - - 8
		51	- 2 - - - - 8
		52	1 - - - - - 8
		53	- 2 - - - - 8
		54	1 - 3 - 5 - - 8

Digital	1 2 3 4 5 6 7 8	55	- 2 3 - 5 - -
		56	- 3 - 5 - -
		57	1 - - 4 5 - -
		58	- 2 - 4 5 - -
		59	- - 4 5 - -
		60	1 - - 5 - -
		61	- 2 - - 5 - -
		62	- - - 5 - -
		63	1 - 3 - - 6 -
		64	- 2 3 - - 6 -
		65	- - 3 - - 6 -
		66	1 - - 4 - 6 -
		67	- 2 - 4 - 6 -
		68	- - 4 - 6 -
		69	1 - - - 6 -
		70	- 2 - - - 6 -
		71	1 - 3 - - - 6 -
		72	- 2 3 - - - 8
		73	- - 2 3 - - - 8
		74	1 - - 3 - - - 8
		75	- 2 - 4 - - - 8
		76	- - 4 - - - 8
		77	1 - - 4 - - - 8
		78	- 2 - - - - 8
		79	1 - - - - - 8
		80	1 - 3 - 5 - 7 -

DELTA

Einstellung der Betriebsart und Adresse
 Setting the mode of operation and address
 Réglage du mode de fonctionnement et de l'adresse
 Instelling van de bedrijfssoort en het adres voor traditioneel gebruik
 Selección del funcionamiento y código
 Impostazione del tipo di funzionamento e dell'indirizzo
 Inställning av driftsätt och adress
 Inställning af driftsform og adresse

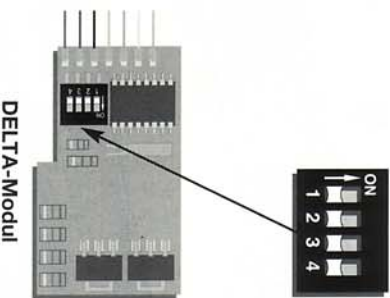

DELTA Station	1 2 3 4	1	1 - - -
		2	1 2 - -
		3	1 - 3 -
		4	1 - - 4

DELTA Control	1 2 3 4	1	1 - - -
		2	1 2 - -
		3	1 - 3 -
		4	1 - - 4

Digital	1 2 3 4	02	- 2 3 4
		06	1 - 3 4
		08	- 3 4
		18	1 2 - 4
		20	- 2 - 4
		24	1 - - 4
		26	- - - 4
		54	1 2 3 -
		56	- 2 3 -
		60	1 - 3 -
		62	- 3 -
		72	1 2 - -
		74	- 2 - -
		78	1 - - -
		80	1 2 3 4

Digital	1 2 3 4	02	- 2 3 4
		06	1 - 3 4
		08	- - 3 4
		18	1 2 - 4
		20	- 2 - 4
		24	1 - - 4
		26	- - - 4
		54	1 2 3 -
		56	- 2 3 -
		60	1 - 3 -
		62	- 3 -
		72	1 2 - -
		74	- 2 - -
		78	1 - - -
		80	1 2 3 4